

QUICKSTART

CV 38/2 – CV 48/2



⚠ WARNING

*These are only brief instructions! Please read the operating instructions accompanying the device prior to using or maintaining the device.
The non-compliance with the operating and safety instructions may lead to damage of the appliance and to risks for the operator and other persons.*


Start up

1



- A CV 38/2
- B CV 48/2


2

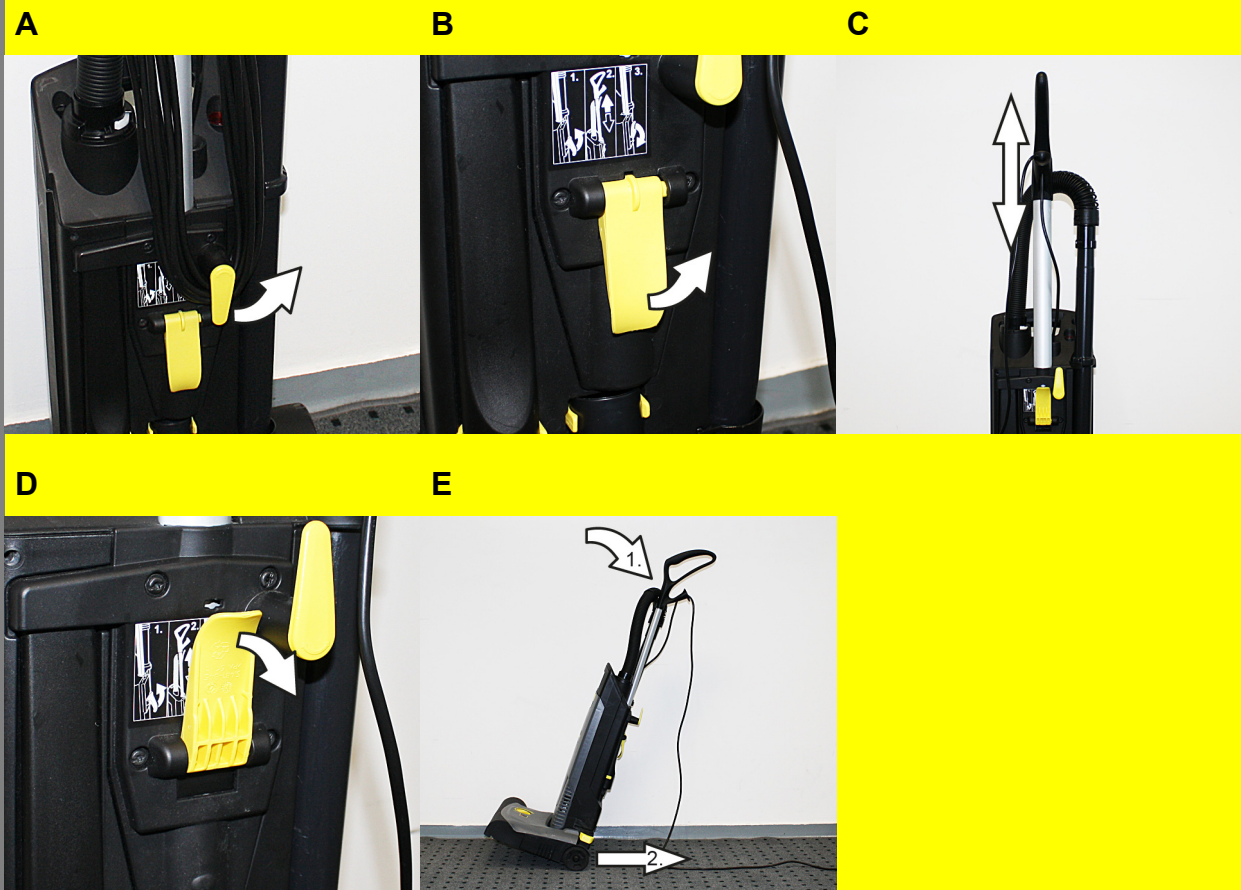

- A Swivel cable hook upward and completely remove the mains cable from the device.
- B Open the holder of the handle.
- C Adjust the handle.
- D Close the holder of the handle.
- E Tilt the appliance backwards and drive it to the place of use.

Operation

3

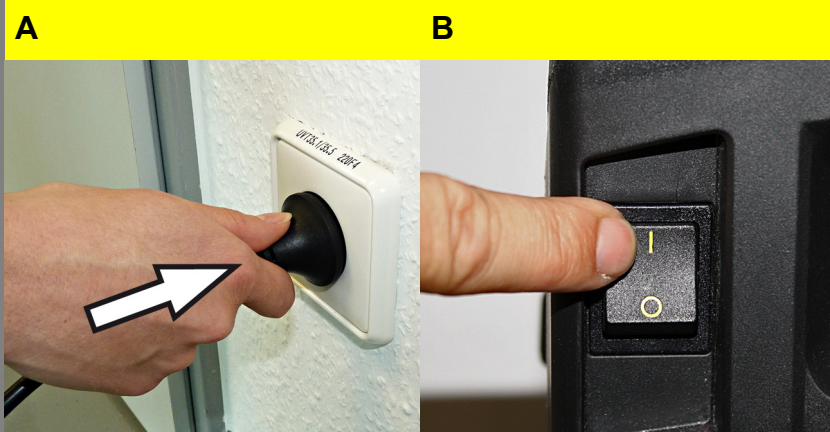


Turning on the Appliance

- A Plug in the mains plug.
- B Switch on the appliance at the main switch.

Operation

4

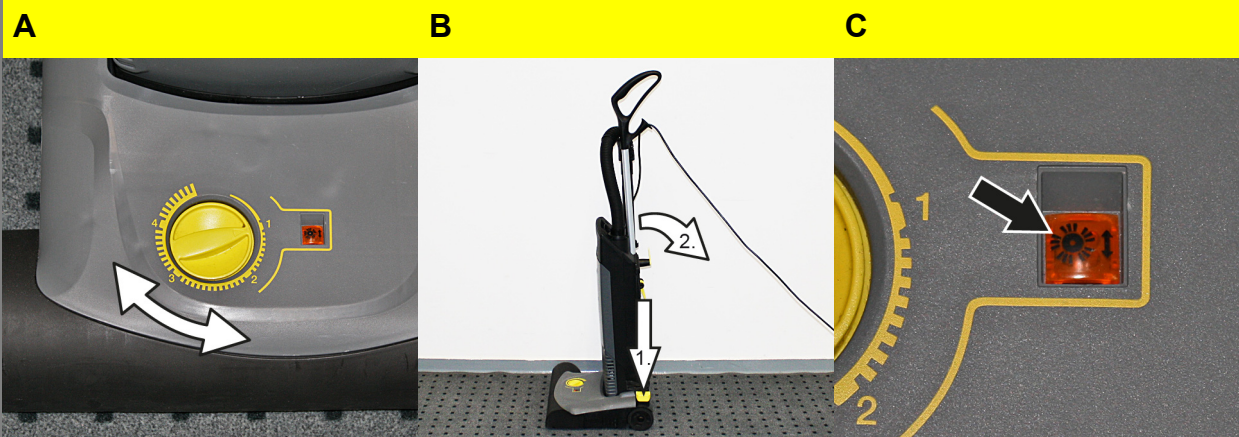

Brush roller operation

ATTENTION

*Risk of damage to the floor covering.
Do not operate the appliance on the spot.*

- A Set the pile height via the adjustment knob of the brush head.
- B Push the unlocking mechanism of the brush head and tilt the handle backwards. Brush motor switches on. Perform the cleaning operation.
- C The electronic brush control continuously monitors the work of the brush roller.

No light

Brush roller is working properly.


Orange light is glowing

Set the adjustment knob for pile height to the lower pile height.

Orange light also glows at lowest level

Replace the brush roller.

5

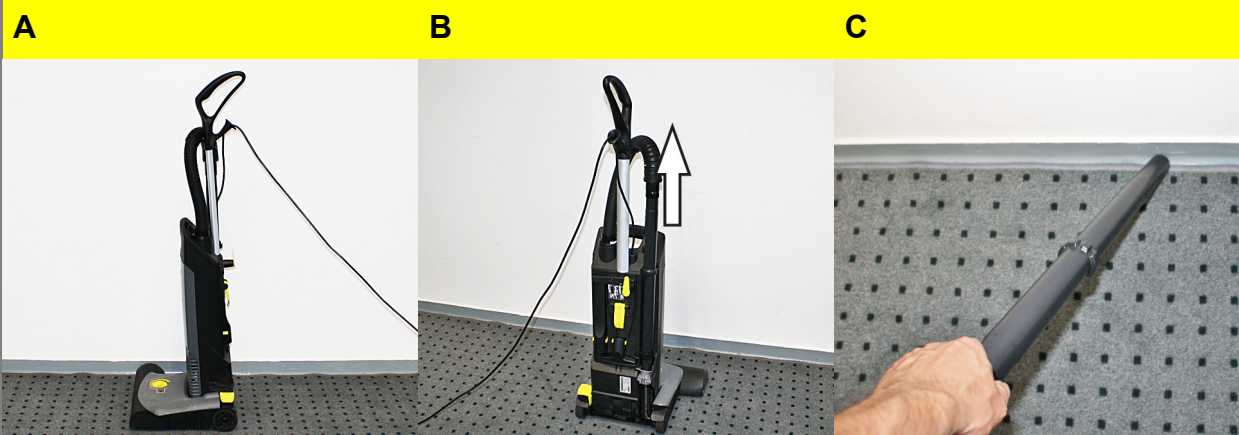

Suction pipe operation


ATTENTION

When you vacuum with the suction hose, the device must lock into place in the home position in order to allow the brush motor to switch off

- A Bring the handle in a vertical position and snap it into place on the brush head.
- B Pull the suction pipe out toward the top.
- C Perform the cleaning operation.

Finish operation

6

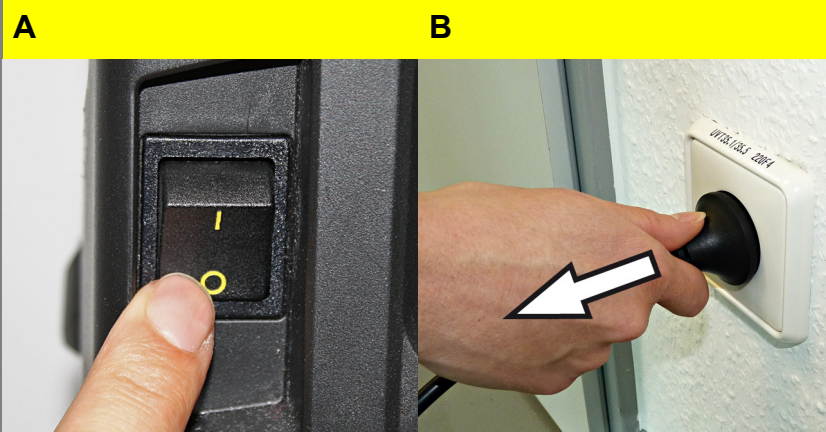

Turn off the appliance.

- A Switch off the appliance at the main switch.
- B Pull out the mains plug. Wind the mains cable around the cable holders.