



CNS 18-30 Battery

Simple to use, versatile and perfect for tree maintenance: the lightweight CNS 18-30 Battery chain saw with tool-less chain tensioning system.





1 Tool-less chain tensioning

The chain is simply tensioned using a knob.



3 Kickback protection

The chain stops immediately – for maximum safety in the event of a recoil effect.

2 Automatic chain lubrication

For low-maintenance use of the battery chain saw.

4 Bumper spikes

Safe guiding and precise cuts because the chain saw attaches to the material that is to be cut.

TECHNICAL DATA AND EQUIPMENT

KARCHER



CNS 18-30 Battery

Chain brake

Oil level indicator

■ Included in the scope of supply. *Ø branches: 10 cm

Ideal for tree maintenance where the branches are thin

User-friendly settings and operation

Chain brake and safety unlocking for safe use

Technical data							
Order no.		1.444-001.0					
EAN code		4054278548937					
Guide rail	cm	30					
Chain speed	m/s	10					
Chain pitch		3/8" LP					
Chain gauge		1.1 mm / 0.043"					
Number of drive links		45					
Oil tank capacity	ml	200					
Guaranteed sound power level	dB(A)	101					
Vibration value of front handle (ΔK=1.5 m/s²)	m/s²	3.5					
Vibration values for rear handle $(\Delta K=1.5 \text{ m/s}^2)$	m/s²	5.2					
Motor type		Brushless motor					
Battery platform		18 V battery platform					
Voltage	V	18					
Performance per battery charge *	cuts	max. 35 (2,5 Ah) / max. 70 (5,0 Ah)					
Runtime per battery charging	min	max. 10 (2,5 Ah) / max. 20 (5,0 Ah)					
Weight	kg	3.2					
Dimensions (L × W × H)	mm	690 × 230 × 245					
Equipment							
Guide rail		1					
Saw chain		I					
Oil bottle		1					
chain protection		1					
Tool-less chain tensioning		1					
Automatic chain lubrication		•					

CNS 18-30 BATTERY 1.444-001.0

KARCHER



		Order no.			Price	Description	
Batteries		11		1	1		
Battery Power 18/25	1	2.445-034.0				18 V / 2.5 Ah Kärcher Battery Power exchangeable battery with innovative Real Time Technology incl. LCD display to indicate battery level. Suitable for use in all devices on the 18 V Kärcher battery platform.	
Battery Power 18/50	2	2.445-035.0				18 V / 5.0 Ah Kärcher Battery Power exchangeable battery with innovative Real Time Technology incl. LCD display to indicate battery level. Suitable for use in all devices on the 18 V Kärcher battery platform.	
Battery chargers							
Fast Charger Battery Power 18 V	3	2.445-032.0				The fast charger charges the 18 V/2.5 Ah Kärcher Battery Power exchangeable battery to 80% in just 44 minutes and can be used for all batteries on the 18 V Kärcher battery platform.	
Starterkit Batteries and Battery cha	argers						
Starter kit Battery Power 18/25	4	2.445-062.0				Battery Power 18/25 Starter Kit incl. 18 V/2.5 Ah Battery Power exchangeable battery with innovative Real Time Technology and 18 V fast charger. For all devices on the 18 V Kärcher battery platform.	
Starter kit Battery Power 18/50	5	2.445-063.0	 			Incl. 18 V / 5.0 Ah Kärcher Battery Power exchangeable battery and 18 V fast charger: The Battery Power 18/50 Starter Kit for use in all devices on the Kärcher 18 V battery platform.	,
Chainsaw							
CNS 18-30 Battery chain	6	2.444-019.0				Achieve highest quality cuts every time with the CNS 18-30 Battery chainsaw's chain on its 30 cm long bar. Replacement is effortless thanks to the tool-less chain tensioning system.	t 🗆

Available accessories.

CNS 18-30 BATTERY 1.444-001.0





		Order no.			Price	Description	
Machine accessories							
Bio saw chain oil	1	6.990-531.0				Biodegradable saw chain oil reduces the wear of hinges and links on the saw chain of the battery-powered chainsaw. Can be used at ambient temperatures of -30 °C.	

□ Available accessories.