


# 35 Spare parts list FRV TR 30 (5.973-835.0)

Professional \ High pressure cleaner hotwater \ Accessories \ FRV TR 30 \ Spare parts list FRV TR 30

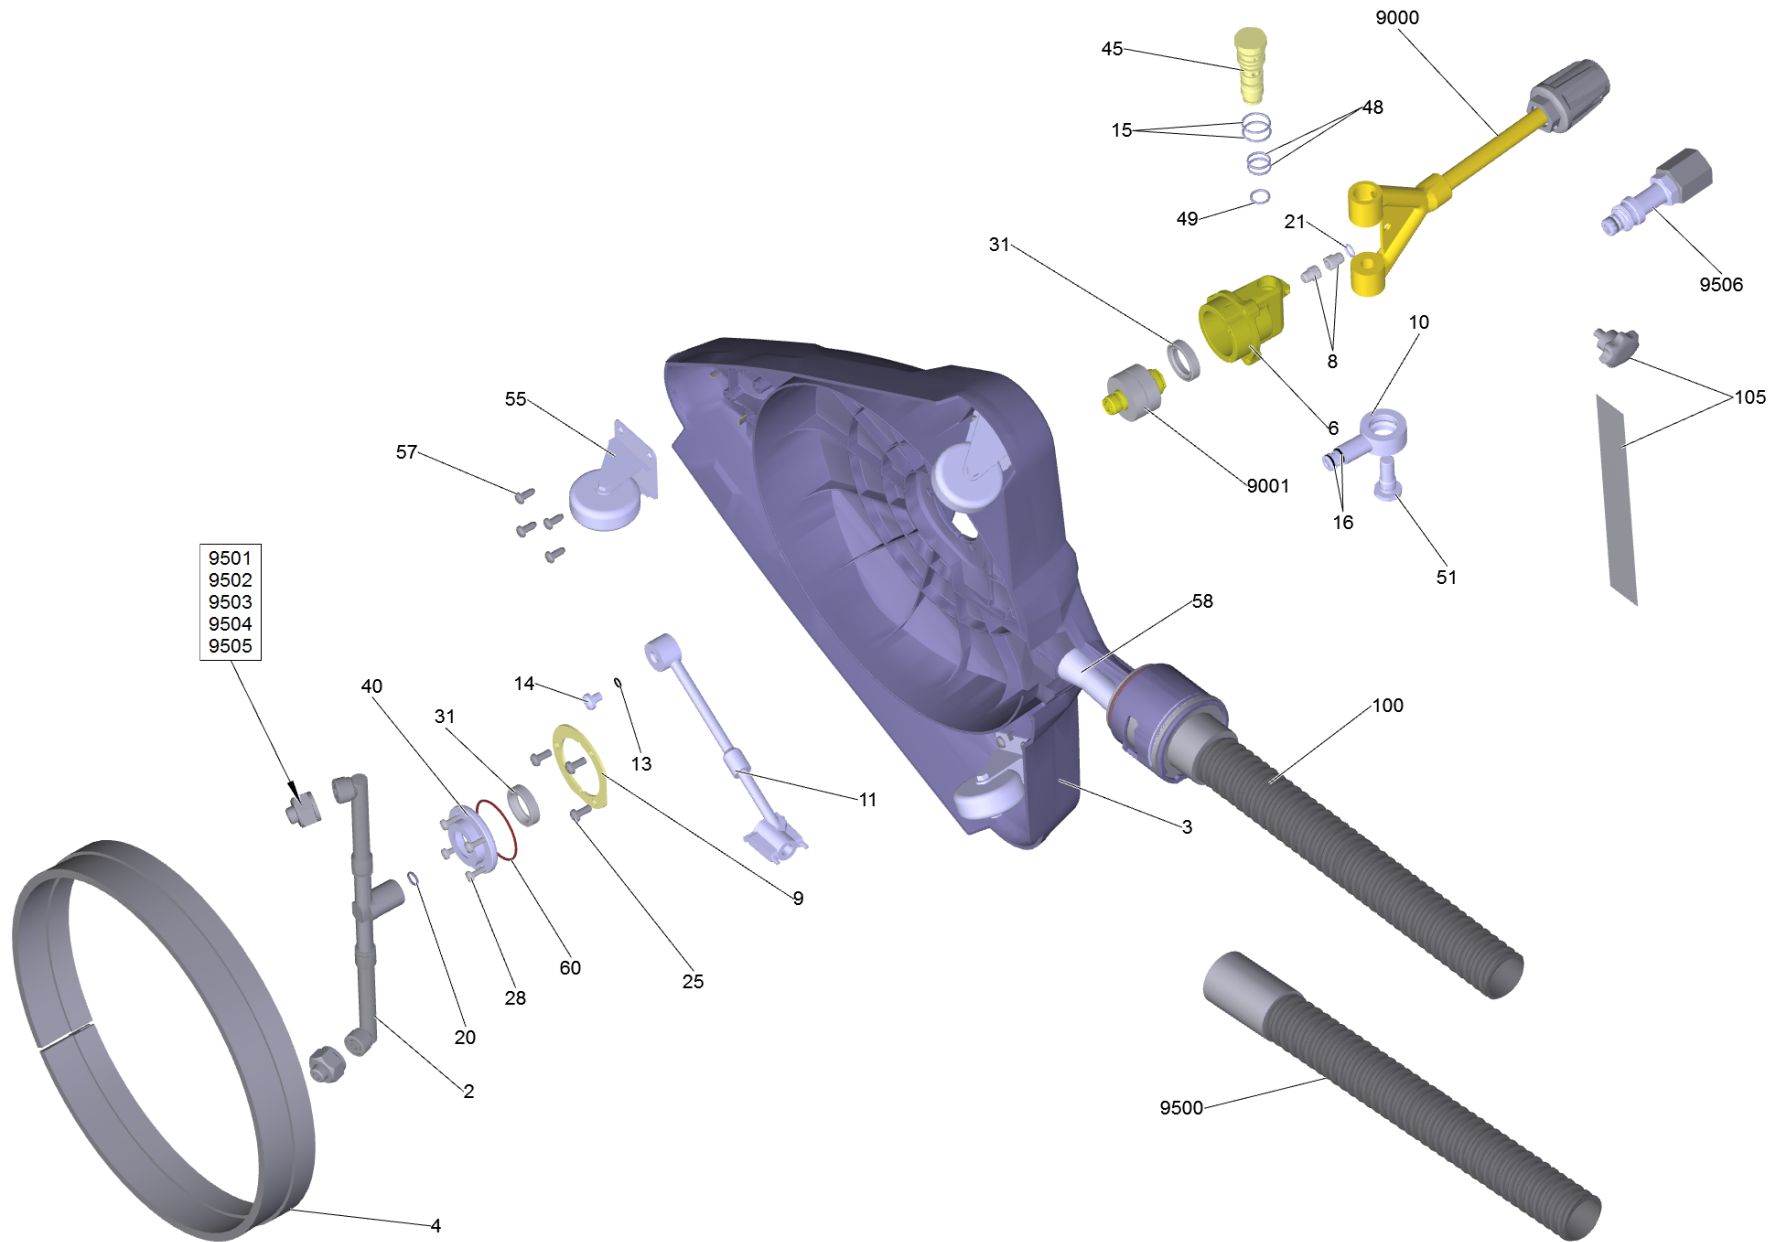

## 35 Spare parts list FRV TR 30 (5.973-835.0)

Professional \ High pressure cleaner hotwater \ Accessories \ FRV TR 30 \ Spare parts list FRV TR 30



POS	Article no.	Description	Quantity	Unit
2	4.764-205.0	Nozzle holder	1	PC
3	5.062-448.0	Cover FRV 30	1	PC
4	6.371-203.0	Brush-corona FRV 30	1	PC
6	5.481-405.0	Base body FR 30	1	PC
8	5.111-322.0	Sleeve	2	PC
9	5.122-003.0	Flange	1	PC
10	5.427-444.0	Manifold	1	PC
11	4.427-364.0	Manifold complete	1	PC
13	6.362-703.0	O-Ring seal 6,0x1,5-NBR 70	1	PC
14	7.306-190.0	Screw M6x8 -A2-70 (In6Rd)	1	PC
15	6.362-524.0	O-Ring seal 17,0 X 1,5	2	PC
16	6.363-331.0	O-Ring seal 9,0 x 1,5	2	PC
20	6.362-388.0	O-Ring seal 8,0x1,5 -EPDM 70	1	PC
21	6.362-658.0	O-Ring seal 7 X 1,5-NBR 90	1	PC
25	7.306-181.0	Screw M 5x 12-A2-70 (In6Rd)	3	PC
28	7.306-204.0	Screw M 3X 10-A2-70 (IN6RD)	4	PC
31	7.367-000.0	Radial shaft seal ring A20x30x7-NBR DIN	2	PC
40	5.122-443.0	Flange	1	PC
45	5.100-624.0	Shaft	1	PC
48	6.363-280.0	O-Ring seal 12,0 x 2,0-NBR 90	2	PC
49	6.363-142.0	O-Ring 10x1.5N BR 90	1	PC
51	5.100-501.0	Shaft	1	PC
55	6.435-842.0	Castor	3	PC
57	7.303-274.0	Screw 5x12 -A2-70 (In6Rd)	12	PC
58	5.111-376.0	Sleeve FRV	1	PC
60	6.362-475.0	O-Ring seal 44,17X 1,78-NBR 70	1	PC
100	4.440-938.0	FRV 30 suction hose DN 32	1	PC
105		Accessories	1	PC
9000	4.802-013.3	Angle joint spare part TR	1	PC
9001	4.250-078.0	Bearing complete	1	PC
9500	4.440-939.0	FR extension hose DN 32	1	PC
9501	2.642-430.0	Nozzle pack 035	1	PC
9502	2.642-431.0	Nozzle pack 040	1	PC

## 35 Spare parts list FRV TR 30 (5.973-835.0)

Professional \ High pressure cleaner hotwater \ Accessories \ FRV TR 30 \ Spare parts list FRV TR 30



POS	Article no.	Description	Quantity	Unit
9503	2.642-432.0	Nozzle pack 045	1	PC
9504	2.642-433.0	Nozzle pack 050	1	PC
9505	2.642-982.0	Nozzle pack 080	1	PC
9506	4.111-022.0	Screw union TR FR TR22-TR20	1	PC