

Spare parts list


(1.645-580.0) SP 5 Dual *EU

Table of contents

SP 5 Dual *EU (1.645-580.0)	3
Spare parts list SP 5 Dual *EU	4
61 Connection piece complete small (4.745-043.0)	6


SP 5 Dual *EU (1.645-580.0)

POS	Description	Quantity	Unit
1000	Service manual SP 3-7	1.000	ST
0	Spare parts list SP 5 Dual *EU	1.000	ST

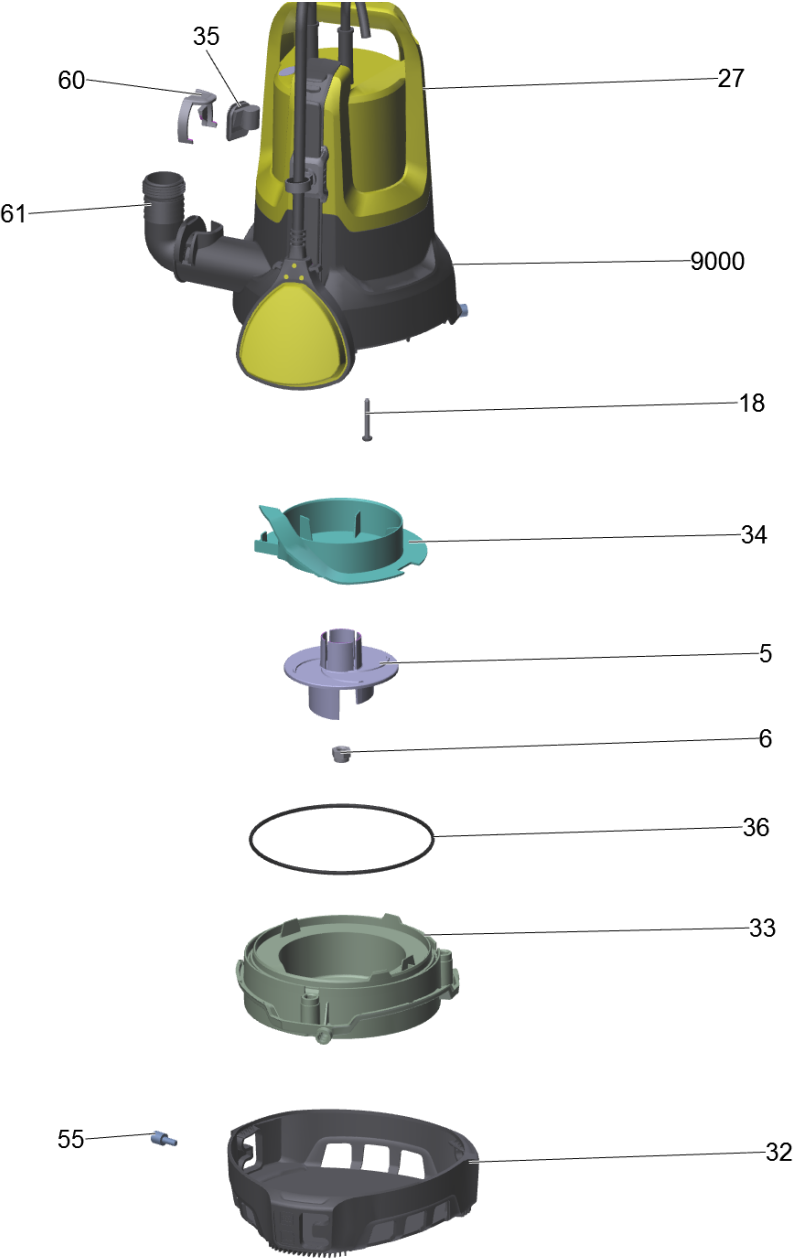

Spare parts list SP 5 Dual *EU

POS	Article no.	Description	Quantity	Unit
60	5.745-015.0	Clamp	1.000	ST
61	4.745-043.0	Connection piece complete small	1.000	ST
33	5.745-096.0	Covering cap hydraulic SP 5 Dual	1.000	ST
6	7.311-514.0	Hexagon nut M 8-A2-70 ISO 7040	1.000	ST
9000	4.745-120.0	Housing set for replacement SP 5 Dirt	1.000	ST
5	5.745-007.0	Impeller SP 5 Dirt	1.000	ST
32	5.745-095.0	Intake hydraulic SP 5 Dual	1.000	ST
34	5.745-097.0	Intermediate layer SP 5 Dual	1.000	ST
36	6.745-009.0	O-Ring seal 135x3	1.000	ST
18	6.645-066.0	Screw 3,9x32	3.000	ST
55	5.745-098.0	Screw SP 5 Dual	1.000	ST
27	5.745-022.0	Sledge	1.000	ST
35	5.745-085.0	Ventilation rubber small	1.000	ST

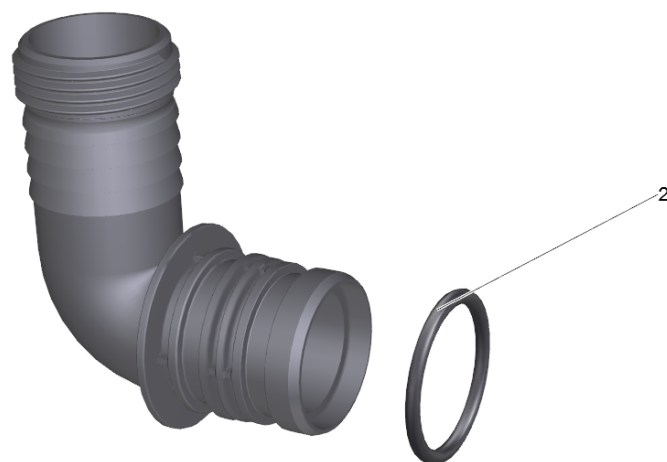

61 Connection piece complete small (4.745-043.0)

POS	Article no.	Description	Quantity	Unit
2	6.645-647.0	O-Ring seal 28x3	1.000	ST