

QUICKSTART

BR/BD 40/25 EP, Bp



Warning

These are only brief instructions! Please read and comply with these instructions prior to using or servicing your appliance.

The non-compliance of the operating and safety instructions may lead to damages of the appliance and to dangers for the operator and other persons.

Start up

1



A

b



Ep model

A Establish mains contact.

Bp model

- A Unplug the charger from the mains.
- B Place the mains cable into the storage compartment.

2



A Open the cover.

B Fill in the water up to the MAX marking of the filling level display. Maximum temperature of the liquid 60°C.

C Pour in detergent.

D Close the lid.

Operation


1



Starting the machine

- A Turn the programme selector switch to a cleaning programme
- B Press control switch.

2

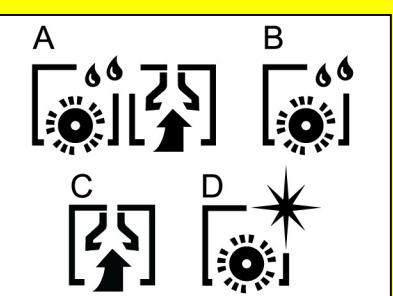

Cleaning Programs

- A **Normal mode**
Wet clean the floor and vacuum up dirt water.
- B **Intense mode**
Wet clean the floor and allow the detergent to react.
- C **Vacuum mode**
Vacuum the wastewater.
- D **Polishing mode**
Polishing the floor without the application of liquid.

3



Setting the water quantity

- A Adjust the water quantity using the regulating button according to the dirt on the floor covering.

4



Swivel in the transport roller.

- A Swivel the transport roller in via the foot pedal.


5



Lower the vacuum bar

- A Lower the lever for lowering the vacuum bar downwards; the vacuum bar is lowered.

6

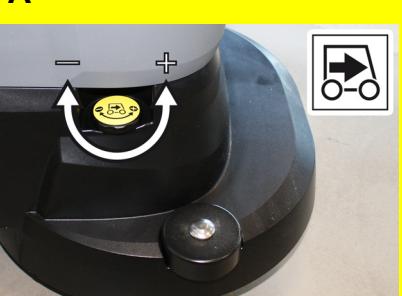

Setting the Advance Speed (BD cleaning head only)

- A Set the advance speed.
- Increase the advance drive:**
Turn the button in "+" direction.
- Decrease the advance drive:**
Turn the button in "-" direction.

Finish operation

1



GB



Turn off the appliance

- A Close the regulatory button for setting the water quantity.
- B Release the control handle.
- C Pull suction bar lowering lever upwards.
- D Turn the program selection switch to "OFF".
- E Swivel the transport roller out via the foot pedal.

Ep model

- F Disconnect the mains connection cable.

2




Emptying the Dirt Water Reservoir

⚠ Warning

Please observe the local provisions regarding the wastewater treatment.

- A Take the water discharge hose from the support and lower above a suited collection device.
- B Rinse the dirt water tank with clear water. Take the water discharge hose from the support and lower above a suited collection device.
- C Leave the cover open to let it dry.

3

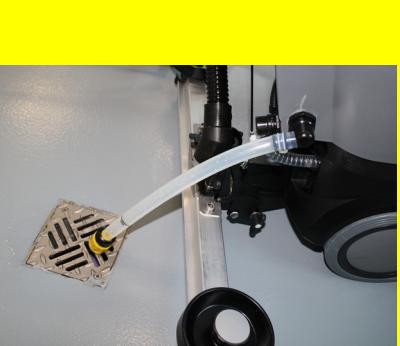

Emptying the Fresh Water Tank

⚠ Warning

Please observe the local provisions regarding the wastewater treatment.

- A Remove the suction hose coupling for draining off the fresh water and hold it over a suitable container.

4



Charging battery

Bp model

- A Charge battery, if required. Insert the plug of the connecting cable into the socket.



Maintenance and care

	daily	monthly	Kärcher Customer Service
--	-------	---------	--------------------------

1



⚠ Warning

Please observe the local provisions regarding the wastewater treatment.



- A Take the water discharge hose from the support and lower above a suited collection device.
- B Rinse the dirt water tank with clear water. Take the water discharge hose from the support and lower above a suited collection device.
- C Leave the cover open to let it dry.
- C Remove the suction hose coupling for draining off the fresh water and hold it over a suitable container. Rinse the fresh water tank with clear water.

2



- A Check the fluff filter, clean if required

5

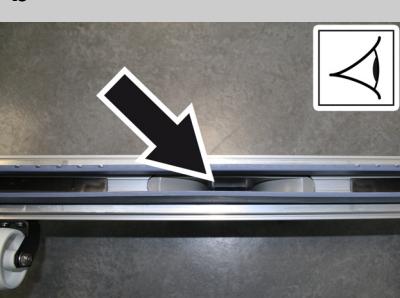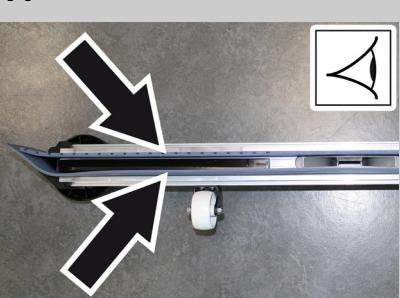

- A Clean the vacuum lips on the vacuum bar, turn or replace if required
- B Clean the suction channel.

6




- A Clean the seals between dirt water reservoir and cover and check for tightness, replace if required.

7

- Every 200 operating hours
- Every 600 operating hours
- Every 800 operating hours

Troubleshooting

1


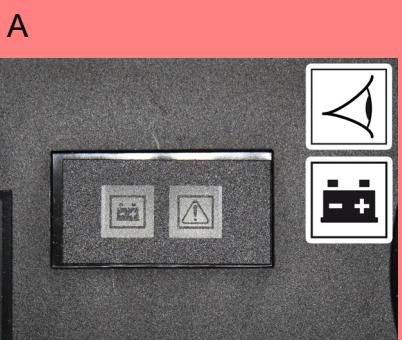


Appliance cannot be started

Ep model

A Establish mains contact.

2

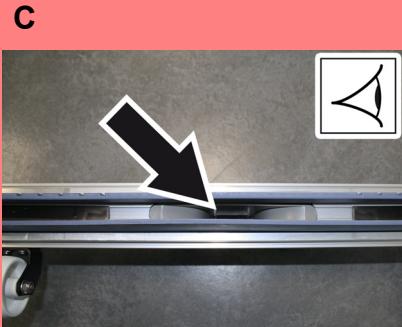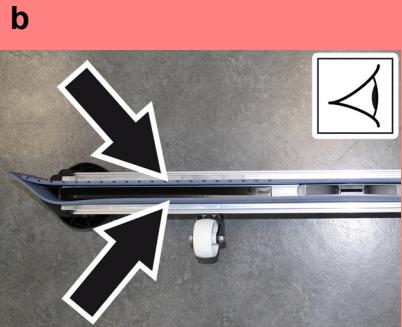



Insufficient vacuum performance

- A Clean the seals between dirt water reservoir and cover and check for tightness, replace if required.
- B Clean the vacuum lips on the vacuum bar, turn or replace if required
- C Check suction hose for blockages; clean if required.

Check connection between suction hose and suction bar and suction hose and wastewater tank.

- D Check the fluff filter, clean if required
- E Check the setting of the vacuum bar.
- F Check if the cover on the dirt water discharge hose is closed

3

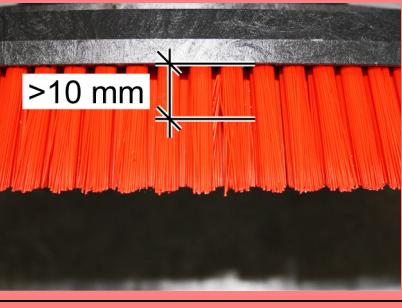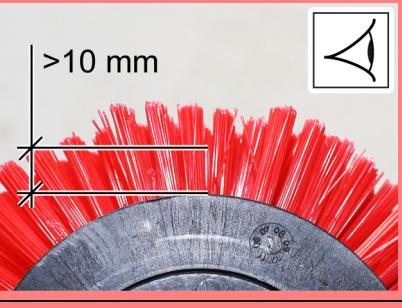

Insufficient cleaning result

- A Check brush for wear and tear and clean it. Check the brushes for wear (bristle length at least 10 mm), replace if required.

4



Insufficient water quantity

- A Check fresh water level, refill tank if necessary.
- B Adjust the water quantity using the regulating button according to the dirt on the floor covering.

5

Brushes do not turn

Check the brushes for blockage due to foreign particles, remove them if found.