

Teile Nr. 0.082-435

F2000249

Assembly Instruction Rotaring washing brush

Application:	For cleaning severly soiled surfaces, particularly for motor vehicles with insect-covered areas.
Operation:	Rotation of washing brush is achieved by way of a directed water jet.
Assembly:	 Release trigger gun, switch off machine. Unscrew nozzle of spray - lance. Attach rotating washing brush to the connection of spray - lance. <u>Important!</u> Do not lose o-ring when chaning.
Handling:	Switch on the machine and actuate trigger gun. The cleaning action is achieved by turning of the washing brush under slight pressure. If the pressure is too high the speed of the washing brush will drop. Cleaning agents listed in the machin's operating instructions may be used.



Alfred Kärcher GmbH & Co. - Alfred Kärcher Strasse 28-70 - D-71364 Winnenden

1/1