


Spare parts list


(1.394-221.0) HV 1/1 Bp Fs *EU

Table of contents

HV 1/1 Bp Fs *EU (1.394-221.0)

  3

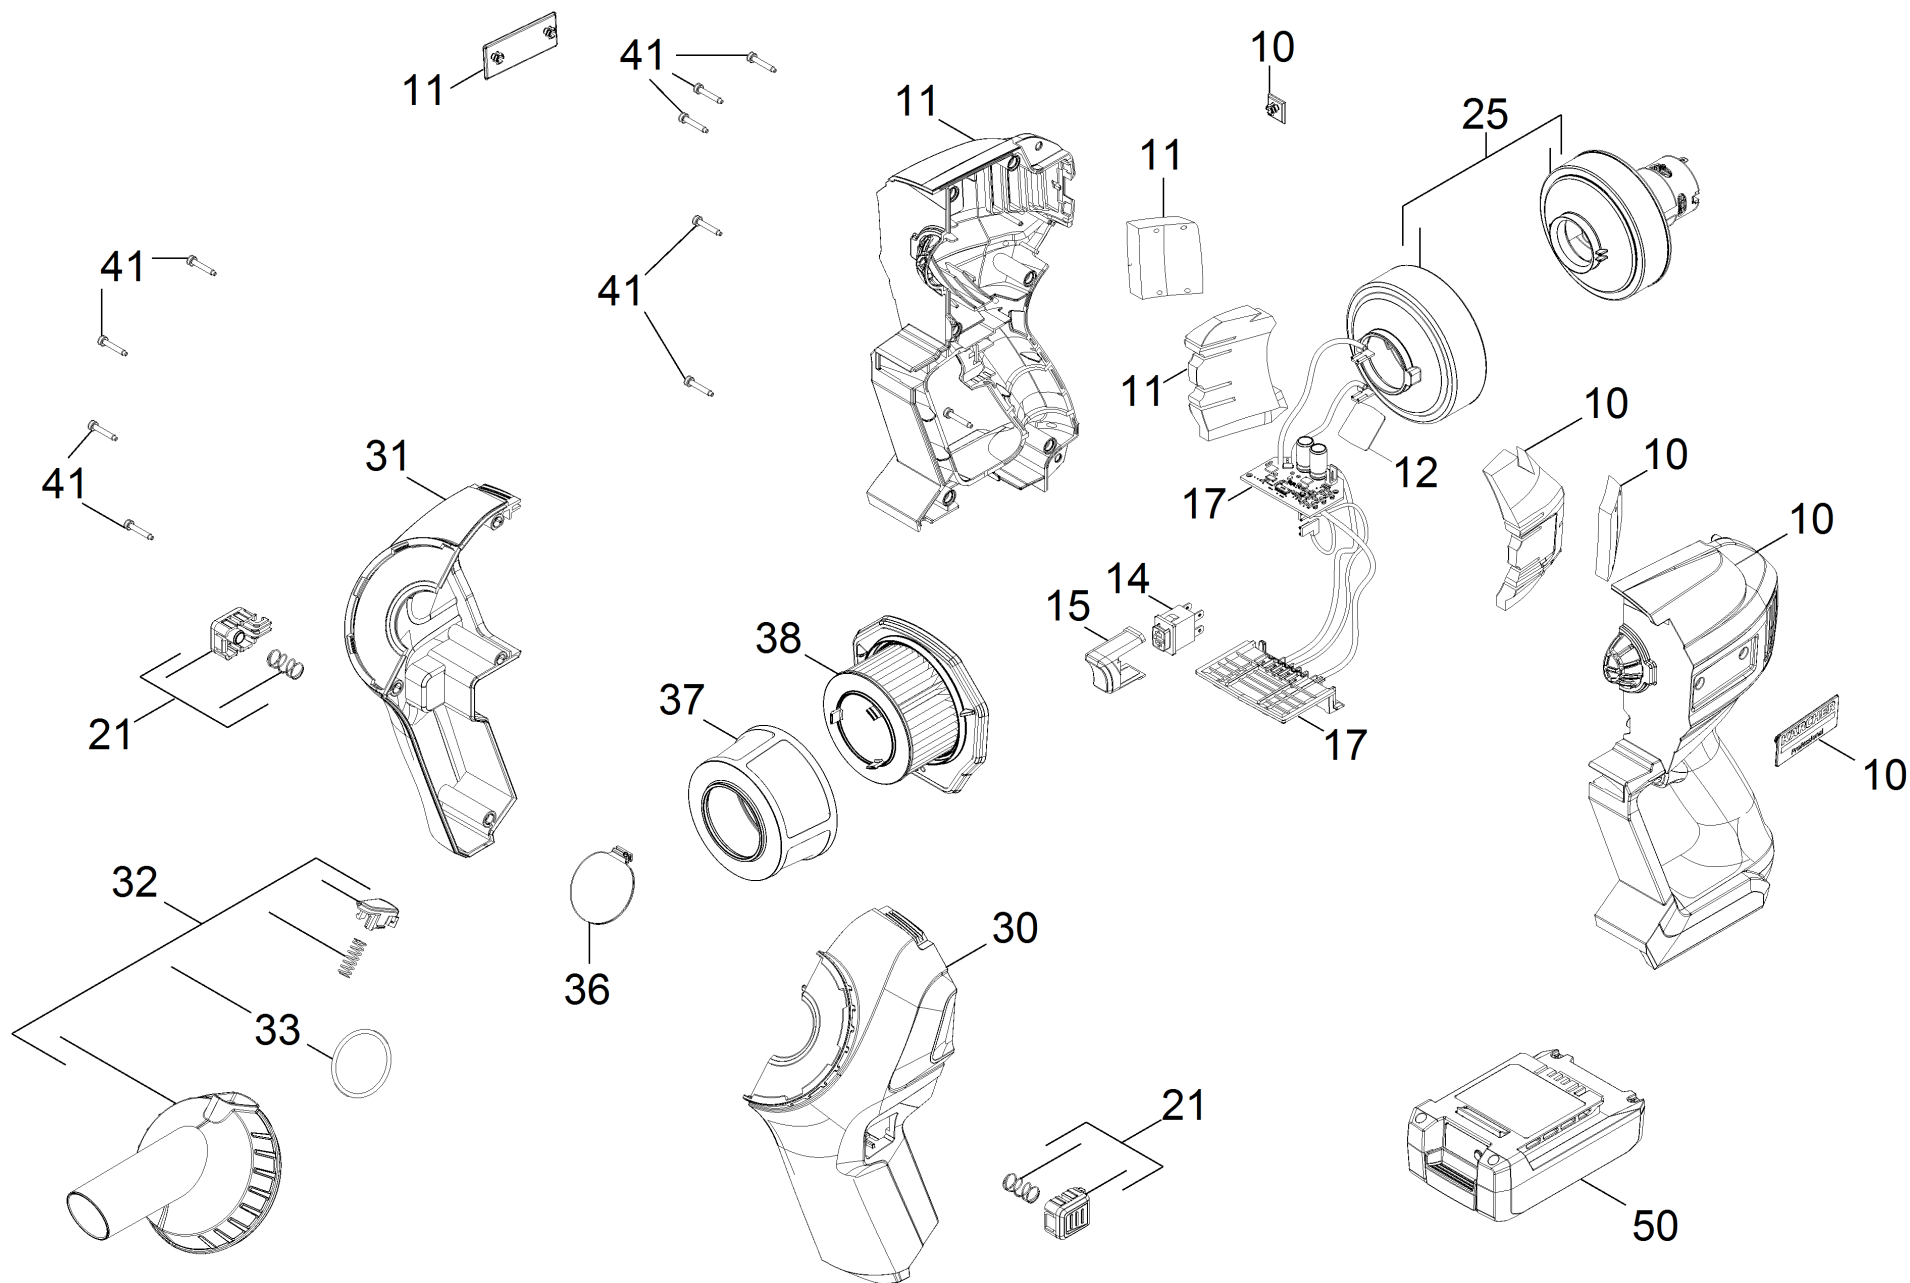

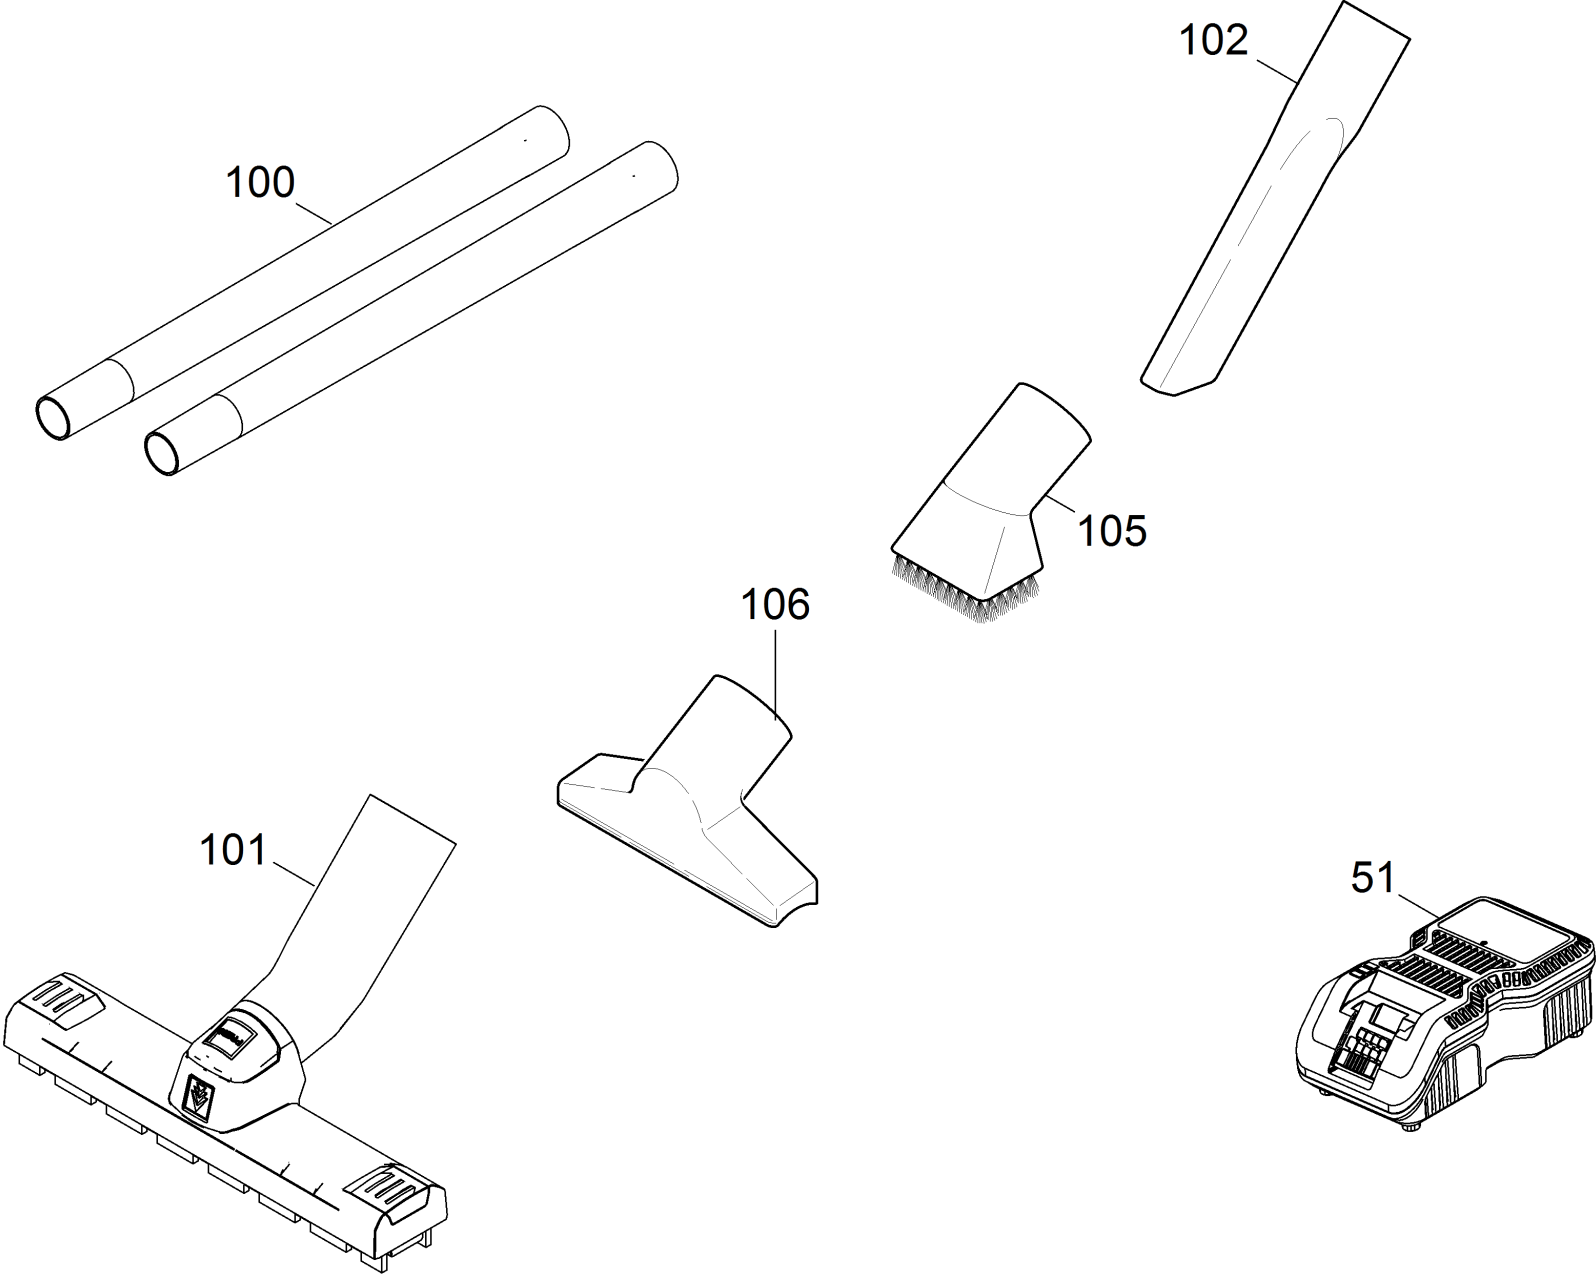

POS	Article no.	Description	Quantity	Unit
10	4.071-328.0	Set housing left	1.000	ST
11	4.071-329.0	Set housing right	1.000	ST
12	6.634-011.0	Touch pad panel HV 1/1 Bp	1.000	ST
14	6.630-809.0	Switch	1.000	ST
15	5.324-002.0	Pushbutton	1.000	ST
17	4.645-699.3	Electronic components only for replaceme	1.000	ST
21	4.071-330.0	Set locking part box	2.000	ST
25	4.071-334.0	Set vac motor	1.000	ST
30	5.071-086.0	Tank bowl left	1.000	ST
31	5.071-100.0	Tank bowl right	1.000	ST
32	4.071-331.0	Suction nipple greased and mounted	1.000	ST
33	6.363-579.0	O-Ring seal 35 x 2,5	1.000	ST
36	5.333-216.0	Cover flap	1.000	ST
37	5.745-094.0	Prefilter	1.000	ST
38	6.414-034.0	Cartridge filter	1.000	ST
41	6.303-245.0	Cylinder head screw 3X18-ST-A2E	10.000	ST
50	6.654-364.0	Accumulator package BP 250/18	1.000	ST
51	6.654-361.0	BC 1/2 *EU	1.000	ST
100	5.481-110.0	Suction tube NW35,505mm,RAL 7012	2.000	ST
101	4.130-027.0	Floor tool	1.000	ST
102	6.900-385.0	Crevice nozzle DN35	1.000	ST
105	2.889-221.0	Suction brush packaged NW 35	1.000	ST
106	6.905-998.0	Upholstery nozzle complete NW35	1.000	ST