

Name:

## Assembly instructions

Hose coupling kit


Material no.

0.081-491

## Hose coupling kit

## <u>ASSEMBLY INSTRUCTIONS 0.081-491 FOR HOSE COUPLING KIT 2.862-036/-037/-038/-077/-078</u>

- PLACE COLLETS (2, 7) OVER BOTH HOSE ENDS.
- ON BOTH ENDS, SCREW GASKET RINGS (3, 6) ONTO HOSE ENDS (LEFT-HAND THREAD).
- (ASS 2.862-078 ONLY: PLACE COMPENSATION RING (8) INTO FEMALE COUPLING (5) AND CONNECTION SLEEVE (4)).
- ON UNIT END OF HOSE, PUSH FEMALE COUPLING (5) OVER GASKET RING (3), AND ON ACCESSORY END OF HOSE, PUSH MALE COUPLING (5) OVER GASKET RING (6), UNTIL COLLETS (2, 7) SNAP INTO PLACE ON BOTH ENDS.
- PUSH RING (1) OVER FEMALE COUPLING (5).

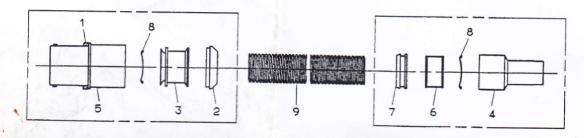

Description	No.	Hose coupling kit						
		DN 35 2.862-036	DN 35 - EL 2.862-077	DN 40 2.862-037	DN 40 - EL 2.862-078	DN 61 2.862-038		
Ring	1	5.114-105	5.114-105	5.114-105	5.114-105	5.114-105		
Collet	2	5.262013	5.262-013	5.262-013	5.262-013	5.262-012		
Gasket ring	3	5.363-156	5.363-248	5.363-155	5.363-313	5.363-154		
Male coupling	4	6.902-062	5.453-027	5.453-010	5.453-030	5.453-011		
Female coupling	5	5.470-008	5.470-014	5.470-008	5.470-014	5.470-007		
Threaded ring	6	6.902-064	5.363-248	5.363-155	5.363-313	5.363-154		
Collet	7	6.902-065	5.262-014	5.262-013	5.262-013	5.262-012		
Compensation ring	8	-	-		6.401-232	-		
Suction hose Length 3 m	9		6.389-195					
Length 4 m	-			6.388-723	6.389-476			
Length 5 m			6.389-840		1.000 110			
Length 10 m		6.389-838	6.389-841	6.389-833	6.389-842	6.389-843		
Length 15 m		6.389-839				0.003-040		
Length 16 m				6.388-987				

Alfred Kä	rcher GmbH	& Co. KG. AI	frod Körobo	- C4-	20 4	0 D 7400414					-	
2008-03-18	AW01704	AW02068	TMD-W	е	1	2020117		2005-06-14		е		
Date	Signed	Checked	Std. checked Mod. Ind No of. Replace for		e for	Replace f. Index						
			ı	Montag	gean	5101690	МТ	A 000	01		1	1
				Docum	nent	Number	Тур	Dok. Part.	Vers		Page	of